

## FALCON 50W IP65 LED WALL LIGHT WITH PHOTOCELL, 5500K

## RFA05055DH-04

PLEASE READ INSTRUCTION BEFORE COMMENCING INSTALLATION AND RETAIN FOR FUTURE REFERENCES.

! Electrical products can cause death or injury, or damage to property. If in any doubt about the installation or use of this product, consult a competent electrician Note:

Product technical information and specification may change over time without prior notification. For the latest technical information please visit our web site www.ledgrouprobus.com.au or ideal.com.nz

-25°C <Ta < +40°C, 220V - 240V ~ 50/60Hz, Class I, IP65

## Installation

- 1. Ensure mains supply is switched off before commencing work.
- Select suitable location for luminaire: Avoid area where a shadow may fall on the sensor. Ensure that the diffuser does not to become dirty. Do not allow artificial light to activate the sensor. Artificial lighting may false trigger the sensor
- Open the diffuser by removing screws, mark wall with appropriate fixing positions. Before drilling, ensure that the hole does not impinge on pipe work, cables or other building services.
- 4. Mount the base of luminaire on wall and attach diffuser.
- 5. The luminaire is supplied with 1.5m of rubber cable. Using suitable IP rated enclosure terminate Brown (Lin), Blue (Neutral), Green/ Yellow (Earth) and if required Black (Lout) to switched supply. If Black (Lout) is not used please terminate in an un-used terminal.

Note: It is not possible to control more than 250W of LED load or 4 additional fittings.

This product has no user serviceable parts. If any part is damaged, disconnect from mains and discontinue use.

The Installation must be carried out by a qualified electrician

LED Group Australasia 9/210 Queensport Road North Murarrie QLD 4172 Australia

Tel: +61 73893 1488 Fax: +61 73112 1927 Email: purchases@ledgrouprobus.com.au Website: www.ledgrouprobus.com.au

















