


KIT CONTENTS



PART No.:	DESCRIPTION	QTY
XCPSG00429	BASE - VERTICASA MSH	1
XCPSG00430	COVER - VERTICASA MSH	1
XXXBP00009	CABLE TIE	4
TRAD77010	WALL PLUGS	2
20084	FIXING SCREWS	2

1

IDENTIFY THE REQUIRED PORTS THAT NEED TO BE ENTERED AND BREAK OUT THE CUT-OUT USING A PAIR OF LONG NOSE PLIERS

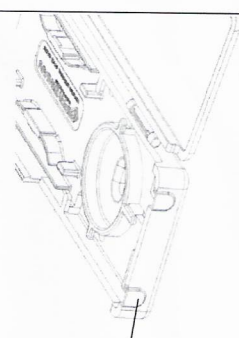


2

THREAD TWO CABLE TIES THROUGH THE SLOTS AT THE CABLE ENTRY. DOING THIS NOW BEFORE SECURING THE BOX TO THE WALL EASES INSTALLATION LATER



3


MOUNT THE BOX TO THE WALL USING THE FIXING SCREWS AND WALL PLUGS PROVIDED. THE TWO MOUNTING POSITIONS ARE INSIDE THE CENTRAL MANDRELS. THE BOX SHOULD BE MOUNTED WITH THE COVER HANGING DOWN AS SHOWN.

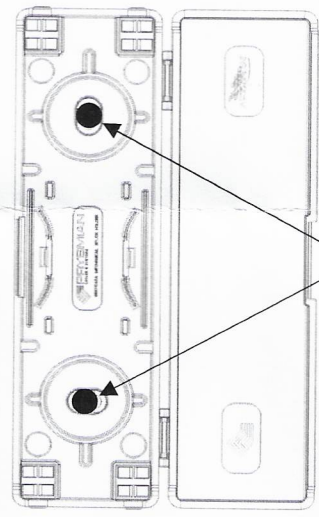

MOUNTING POSITIONS

4

POSITION THE CABLE INTO THE BASE OF THE UNIT AND SECURE IT USING THE TWO CABLE TIES

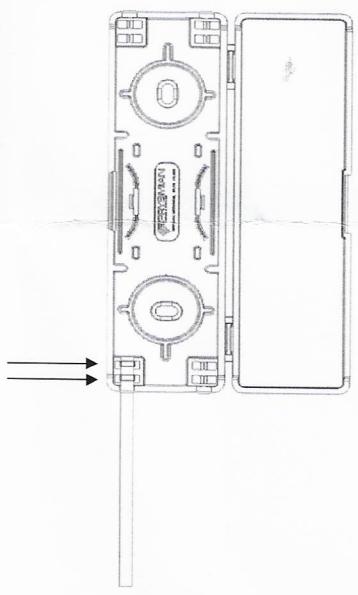


5


FOR CABLE ROUTING AND SPLICING FOLLOW THE DIAGRAMS OPPOSITE

EXAMPLES OF ROUTING


2 FIBRE CABLE

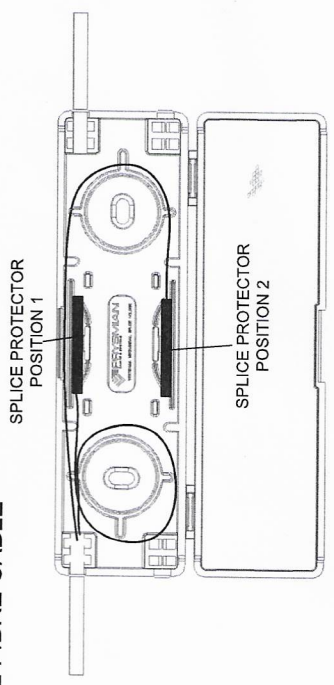

SINGLE FIBRE CABLE TO CABLE

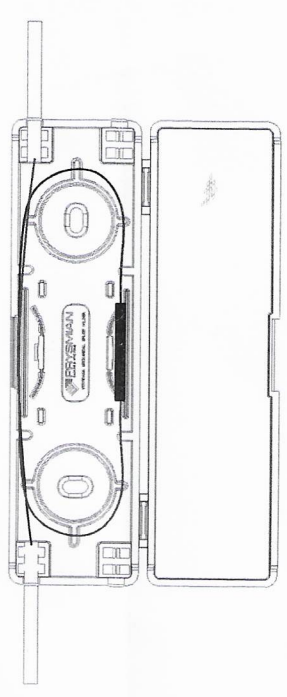

DUAL FIBRE CABLE TO CABLE

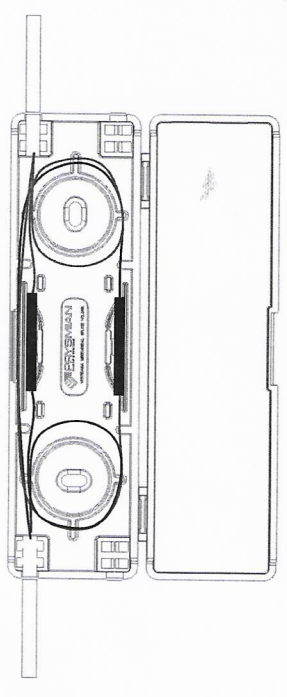

Document No.: IP108

Physician Help Line:
+39 02 6449 37695

1 of 1