


5.0 Operation Instruction

5.1 Sonde Assembly



Check the battery condition of the electric module. Replace if necessary (see figure 5.1.1) ensure that "O" ring seal is fitted correctly (see fig 5.1.2). It is recommended that a spare battery is always available.

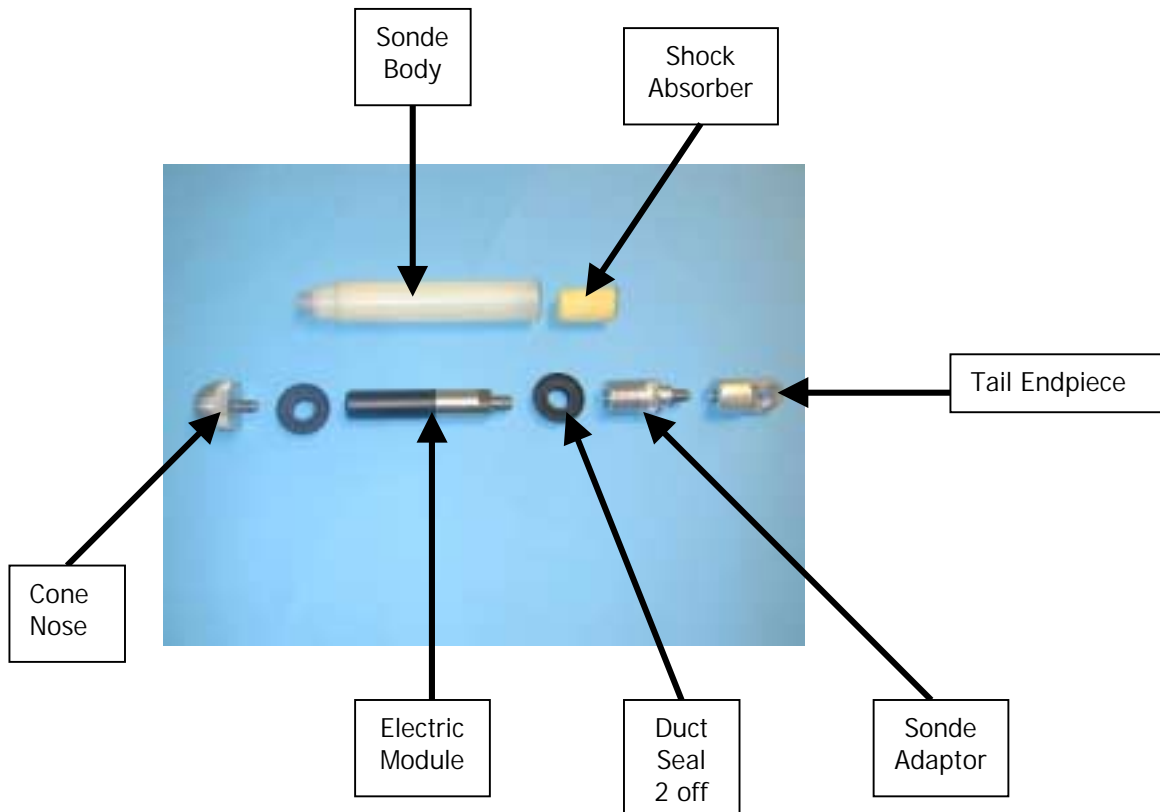

Electric Module Components



Fit Battery This Way
Fig 5.1.1



"O" Ring Seated Correctly
Fig 5.1.2

Insert the shock absorber into the sonde body and press fully down to the front end.

Assemble the sonde adaptor to the electric module, ensure both parts are screwed tight. Screw this unit into the sonde body and ensure it is tightened correctly.

Assemble both seals, ensure they are in good condition, replace if worn or split. Ensure that lip of the seal faces towards the rear of the unit, i.e. towards the tail endpiece.

Assemble the tail endpiece to the sonde adaptor and ensure it is tightened correctly.